

## TekTone® Tek-CARE®160+ System Layout

(Training is required to install and configure + systems. Maximum number of master stations, multicolor dome lights, and duty stations may be increased using the Tek-CARE Master Station Load Value Calculator available at [www.tektone.com/resources](http://www.tektone.com/resources). See installation manuals for complete wiring information.)

