



# Getting Started

***\*\*Software requires a PC running Windows 7 or later\*\****

*To obtain a FREE copy of this software, please find the invoice number associated with your order, and contact us at 888-556-3998, or email us at [support@becsolutionsllc.com](mailto:support@becsolutionsllc.com).*

## Notes:

- To take full advantage of the software's capabilities, your computer will have to connect and remain connected to your IP video system's network (NT-Series).
- Internet is NOT required, however you'll need to make sure the computer is connected to the same network or switch as your NT-series components.
- Please see our IP Video Intercom manual for further setup assistance on your system. You'll find more information such as setting your IP address, assigning a room number, changing passwords, etc.

## Installing the Software

1. You'll need to extract all files from the ZIP archive "BEC\_Manage\_eng" to a folder.
2. Navigate to DK\_CMS > and run the .bat file "srv\_install.bat". This adds the services to your windows startup folder. Run the file "srv\_remove.bat" to remove/uninstall from your system.

Alternate Setup: Run the following 3 files -

- \*\\DK\_CMS\\tomcat-6.0.36\\bin\\startup.bat (REQUIRED: Latest version of Java Runtime Environment - <http://java.com/en/download/>)
- \*\\DK\_CMS\\bin\\watchdog.exe
- \*\\DK\_CMS\\bin\\cms.exe

You can create shortcuts to these files, then place them into the windows startup folder if "srv\_install.bat" does not work correctly. This will automatically start the three services upon system boot.

3. Log into the software with default user and password -

**User:** admin

**Password:** 123456.



# Software Setup

*\*\*Windows may prompt you to allow or deny these files through your anti-virus software/firewall. Please click allow on all prompts as they appear to ensure your network devices can speak with the software.\*\**


## Connecting Your Devices

- On EACH component you wish to manage, you need to enter a server address and password. The server address will be the computer's IP address where you've installed the software, while the password by default is 123456. If the IP is unknown, it can be found within your router by searching for the computer name, or by pressing [Windows Key]+R, type "cmd", then in the command window, type "ipconfig" and locate the IPv4 address.

- Once your components have the correct server information programmed, you can add devices within the software.
- 1. To Add a Device** - navigate to System > Account, and choose the corresponding tab for your device (Ex. Model NT-IP-G9W = Monitor, Model NT-IP-A9K Full-Size Panel = Panel, NT-IP-DRCR/DRSI/DRG = Person)
- 2. To Add a Monitor** - Select the group XM, or create your own custom group in the Group tab. Enter the password assigned to the component and type a name to identify the monitor (a name will be generated if left empty). Enter the building, unit, and 3-4 digit Room No. (Floor # + Room #). Click Add to add the device to the selected group



# Connecting Devices Cnt'd

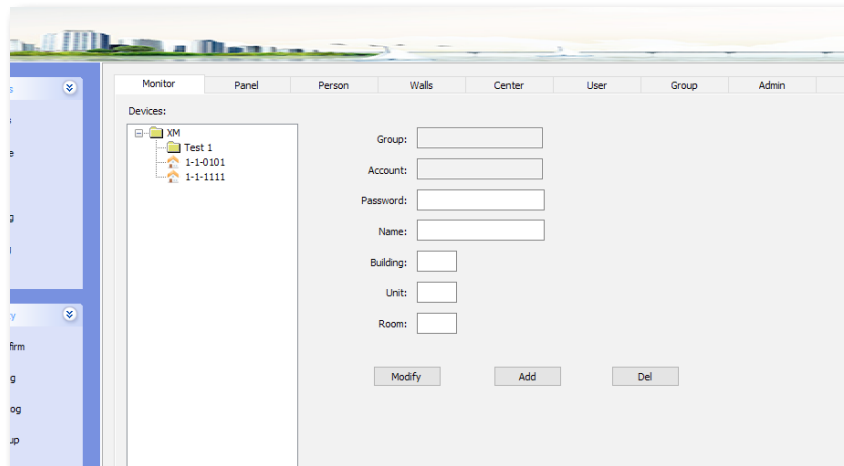

**3. To Add a Panel** - Select the group XM, or create your own custom group in the Group tab. Enter the password assigned to the component and type a name to identify the panel (a name will be generated if left empty),

Enter the building, unit, and index no. (Usually "1", unless you have more than one AGK Panel)

Click Add to add the device to the selected group

**4. To Add a Personal Panel (One Button)** - Select the group XM, or create your own custom group in the Group tab.

Enter the password assigned to the component and type a name to identify the panel (a name will be generated if left empty).

Enter the building, unit, 3-4 digit room no. (floor + room), and index of the panel, then click Add. You can find all of those settings by accessing the user interface at the corresponding IP address.

